



INtime® SDK
Evaluation Licensing
Procedure

 




Table of Contents

- 1. SDK Evaluation license installation 2
- 2. INtime for Windows Deployment Trial License installation..... 8
- 3. INtime Distributed RTOS Deployment Trial License installation 8



1. SDK Evaluation license installation

SDK Evaluation license installation consists of installing a License String using the “Add license...” function in the License Manager. The License String must be generated for a development host. Steps below go through the procedure. The instructions are performed on two platforms, which may be the same, one with an Internet connection  to the TenAsys.com web site, and the development host .

Refer to the **INtime Deployment Trial License Procedure** to license INtime for Windows on a different host or for INtime Distributed RTOS.

Identifying license components:

Fingerprint: ---- BEGIN HOST INFO ----<ascii>---- END HOST INFO ----

License String: *<ascii license string>[# “16” version “”, no expiration date, exclusive...] Located in the %INTIMECFG%\servrc file.

Step by Step SDK Evaluation license installation Example

Obtain the SDK Evaluation License String. The License String is available on the TenAsys.com web site after logging in with a registered user account that has been linked to a company account.

- 1.1. On an internet connection:  **Login to [TenAsys.com](https://www.tenasys.com)** (Register for a personal account if you do not have an account.)

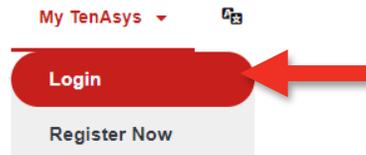


Figure 1-1 - Login or Register

- 1.2.  **Go to the [Evaluation Request](#) page.** Fill out the form and wait for a response from TenAsys.

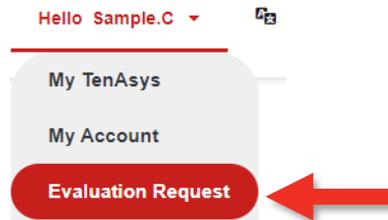


Figure 1-2 - Evaluation Request



- 1.3.  After receiving an evaluation invitation by email from TenAsys: **Go to the [My Downloads](#) page.**

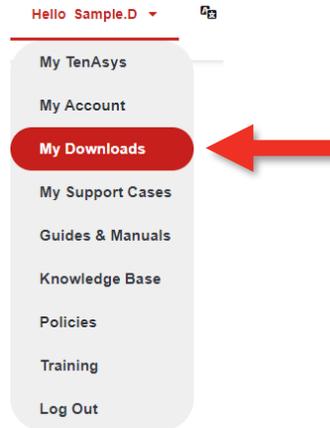


Figure 1-3 – selecting My Downloads

- 1.4.  **Download and install the SDK** on the development host.
SDK Downloads

› INtime for Windows 7.0 SDK Downloads

› Build 23310.1 - Release Date: Nov 10 2023

Release Notes

Description	Download Link
INtime 7.0 SDK - Build 23310.1	intime70-23310-1full_installer.exe 

Figure 1-4 - My Downloads

- 1.5. On the Development Host:  **Open the INtime Configuration Panel.** The *INtime Configuration Panel* can be accessed either by selecting “INtime Configuration” from the *INtime Status Monitor* in the Windows System Notification Area, or by typing in “INtime” in the search bar of the Start Menu and selecting “INtime Configuration” from the list of applications listed.

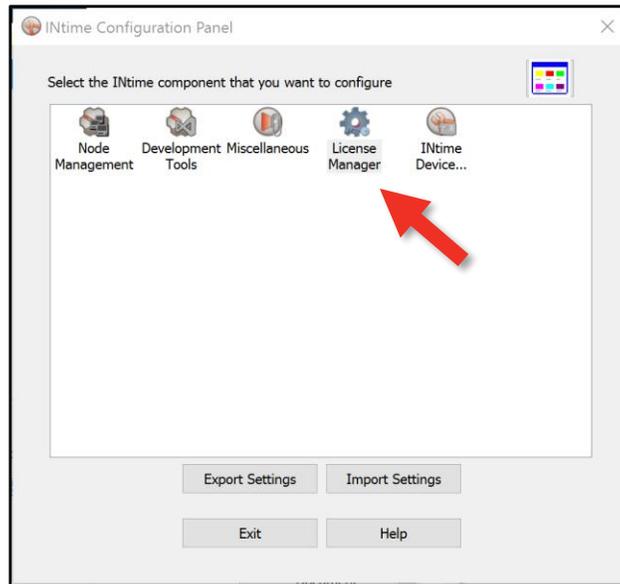


Figure 1-5 – INtime Configuration Panel

1.6.  **Double click the License Manager icon.**



Figure 1-6 – License Management window

1.7.  **Click *Get Fingerprint* in the *License Management* window.**

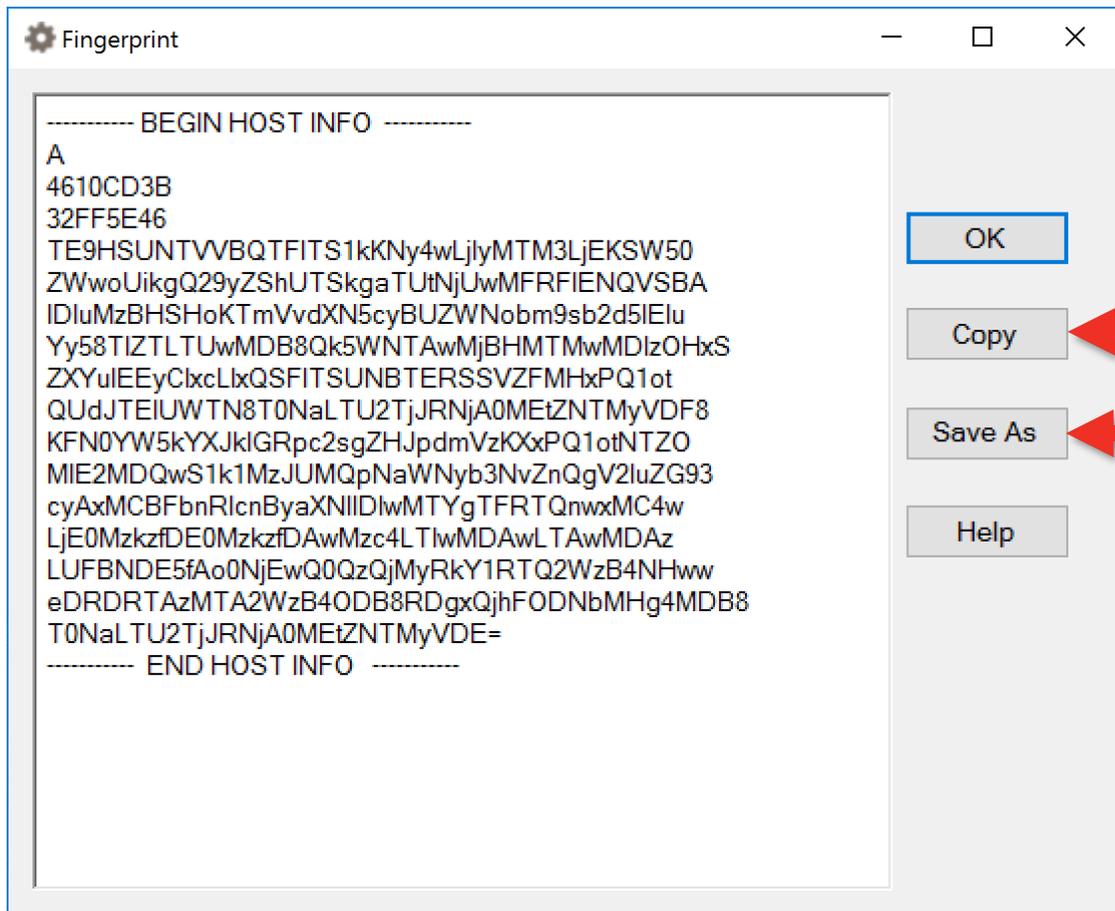


Figure 1-7 – Copy Fingerprint

- 1.8. **Copy** or **Save As ...** the Fingerprint into a file.
- 1.9. On an internet connection: **Go to the [My Account](#) page** on the TenAsys.com web site.

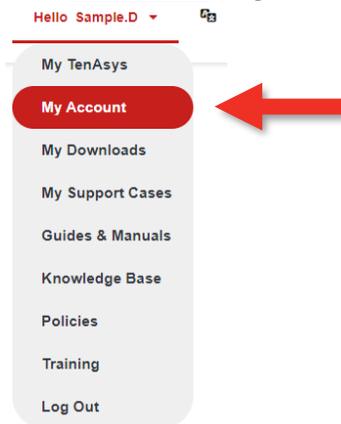


Figure 1-8 - My Account

- 1.10. The Create INtime 7 SDK Evaluation License button allows you to create a license from a fingerprint. If it shows “All available evaluation seats are used.”, the license has already



been generated. Find the license in the table and use “Download License” and Skip to step 1.12.

My Licenses and Agreements

Create INtime SDK Evaluation License - 30-day node locked

HOST	EXPIRES	LICENSE
Optiplex7010-pc	January 17, 2023	Download SDK Evaluation License

Create Deployment Trial License - 30-day node locked

Figure 1-9 - Sample SDK listing

1.11. Paste the fingerprint from step 1.8 into the open window.

Activate SDK Evaluation License

Please paste the fingerprint from the INtime SDK host:

Only press Create License one time. Pressing it again while processing your license request may create an invalid license.

Create License

Figure 1-10 - Paste Fingerprint

1.12. Click Create License, then Download the license file.

Activate SDK Evaluation License

The SDK Evaluation License was created.

The license will be available during your evaluation period on My Account page.

[Download License](#)

[Return to My Account page](#)

Figure 1-11 – Download License

1.13. The license is also available on the [My Account page](#). Copy the license file to the Development host.

My Licenses and Agreements

Create INtime SDK Evaluation License - 30-day node locked

Host	Expires	License
-PC2	March 09, 2024	Download SDK Evaluation License

Create Deployment Trial License - time-limited node locked

Figure 1-12 – Download License

1.14. On the Development host: Open the INtime Configuration Panel. The INtime Configuration Panel can be accessed either by selecting “INtime Configuration” from the



INtime Status Monitor in the Windows System Notification Area, or by typing in “INtime” in the search bar of the Start Menu and selecting “INtime Configuration” from the list of applications listed.

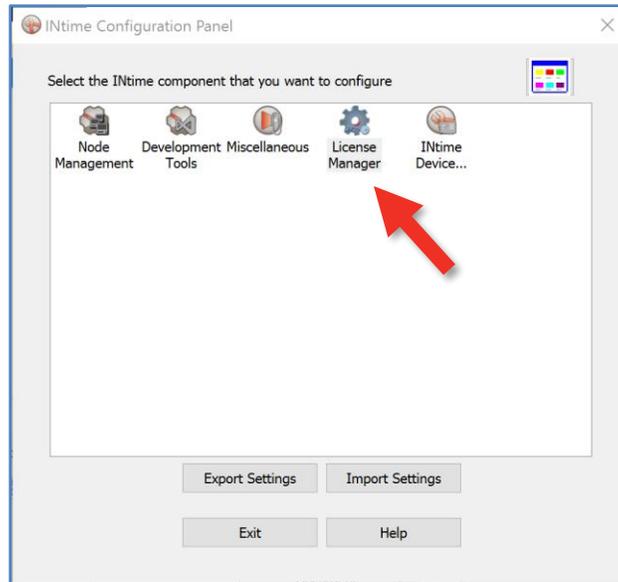


Figure 1-13 – INtime Configuration Panel

- 1.15.  **Double click the License Manager icon.**
- 1.16.  The *License Management* window will appear next. Use the “Use License File” or “Enter String” button.



Figure 1-14 – License Management window

- 1.17.  And paste the License String. Click OK.

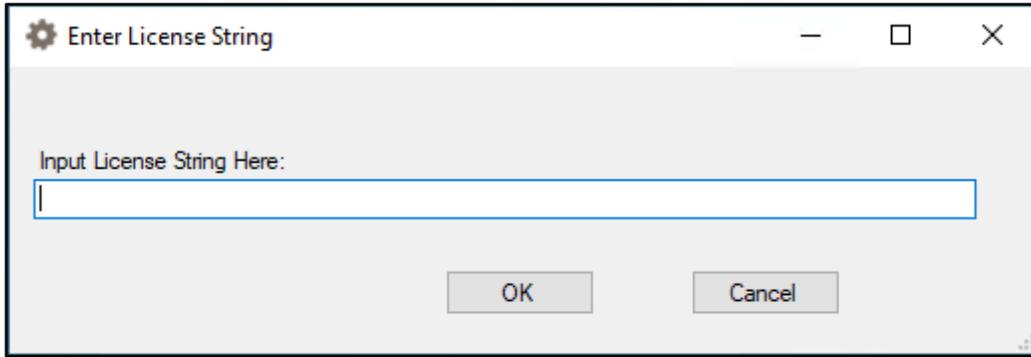


Figure 1-15 – Enter License String window

1.18.  The *License Management* window shows the installed license.



Figure 1-16 – License Management window with new license

2. INtime for Windows Deployment Trial License installation

Refer to the **INtime Deployment Trial License Procedure** to license INtime for Windows on a different host or for INtime Distributed RTOS.

3. INtime Distributed RTOS Deployment Trial License installation

Refer to the **INtime Deployment Trial License Procedure** to license INtime for Windows on a different host or for INtime Distributed RTOS.